 




Rear Sight Laser for all Smith&Wesson® M&P Models RL-MP





Installation:

- 1 **UNLOAD YOUR FIREARM!**
- 2 *Attach danger label to slide of gun near laser with arrow pointing toward front sight.*
- 3 Remove slide from frame, then remove spring and barrel.
- 4 Remove rear sight from slide. **CAUTION:** Only move sight from Left to Right, proceed with care to retain disk and spring.
- 5 Using the provided punch depress the disk over the spring pushing it below the dovetail surface.
- 6 With laser facing toward the front start the laser dove tail into the right side of the M&P slide. Then slide the rear sight laser completely over the disk.
- 7 Using a small hammer, align the brass punch to the side of dovetail, tap the punch until laser is centered in slide.
- 8 Using the included .050 Allen wrench, tighten locking screw in the center of the laser.

1 UNLOAD YOUR FIREARM!

- 2 *Attach danger label to slide of gun near laser with arrow pointing toward front sight.*

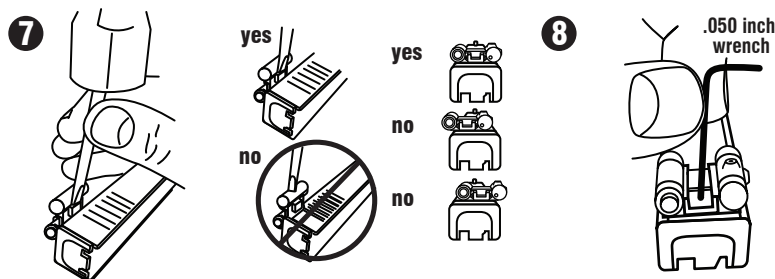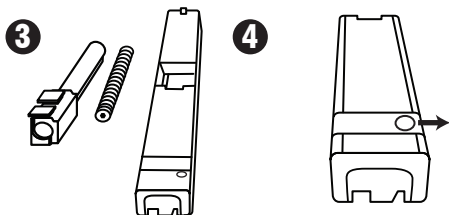

Laser Sight In:

- 1 Assemble barrel and spring into slide and then install back onto gun.
- 2 Make sure your firearm is unloaded and always point in a safe direction.
- 3 Use the provided .035 Allen wrench to adjust the sight.
- 4 Always end adjustments on a clockwise turn.
- 5 Make final adjustments at shooting range.

3

.035 inch
wrench

Elevation

 
up
down

4

Windage

right
left

Moving Laser Dot



Activation:

- 1 Push button once and the laser will be on constant mode.
- 2 Push button twice and the laser will be on pulse mode.
- 3 Push button three times the laser will turn off.
- 4 The small L.E.D. on the back will indicate what mode you are in.



Battery Installation: (4) 377

- 1 Unscrew battery cap and remove batteries.
- 2 Install new batteries.
- 3 Screw in battery cap and tighten.



Uninstall:

- 1 Follow steps 1-3 in Installation Instructions.
- 2 Back out setscrew in center of Laser.
- 3 Using brass punch put the narrow end of the punch on the flat surface of the laser dove tail.
- 4 Using a small hammer drive the laser out from right to left.
- 5 Back out laser setscrews until flush.
- 6 Wait 15 minutes for adjustment reset and reinstall if desired.

WARRANTY:
One Year Limited
Warranty.



LASERLYTE®
A Division of P&L Industries
101 Airpark Road - Cottonwood, AZ 86326
Phone 928-649-3201 - Fax 928-649-3970
www.LaserLyte.com