

RISE Owner's Manual




Features:

- 3 MOA Red Dot
- Top Load Battery
- Sleep Mode & Auto Revive
- Brightness Lockout
- Recall Mode
- DeltaPoint Pro Footprint

1

U.S. OPTICS

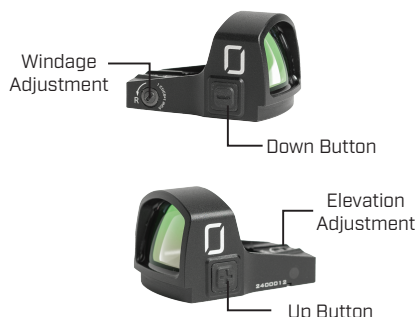

Overall Dimensions: 1.890 x 1.197 x 1.134"

Included Items:

- CR2032 Battery
- Small Flathead L-Key
- Large Flathead & Torx T-10 L-Key
- (2) M4x8 Oval Head T-10 mounting Screws

2



To install the CR2032 Battery, use a screwdriver to unscrew the battery cover counter-clockwise. Remove the cover to reveal the battery compartment.



Insert the CR2032 battery positive side (+) out. Re-install the battery cover and tighten by turning the screwdriver clockwise.

3



Manual Adjustment: Press the "+" button to raise the brightness or the "-" button to lower the brightness.

Sleep Mode: The RISE is equipped with Sleep Mode, which is set by default to turn the dot off after 2 minutes of inactivity.

Auto Revive: Sight will automatically turn on with movement.

Manually turning the sight OFF/ON: Hold the "-" button for 3 seconds to turn the sight off manually. (*sight will fade out when turning off). This will override the Auto Revive feature and keep the sight turned off until manually turned on. Press either the "-" or "+" button to turn the sight back on.

Brightness Lock Out: Hold the "+" button for 3 seconds (*dot will flash) to lock the sight. This will lock the sight at its current brightness setting and override the "sleep mode" feature. Hold the "+" button for 3 seconds (*dot will flash) to turn off the "lock out" feature.

High/Low Flash: The dot will flash 3 times to indicate that you are at either the highest brightness setting (10) or lowest brightness setting (1).

Recall Mode: Sight will automatically remember the last brightness setting when turned on or off.

Mounting (Pistol)

Selecting a mount for your firearm platform

Depending on your desired platform, the RISE may be paired with a low mount, off set mount, or mounted directly on your pistol slide. The RISE is compatible with mounts, plates, slides milled for a DeltaPoint Pro footprint.

Mounting on a Rifle

Step 1. Attach the RISE to your preferred mount using the provided screws and wrench.

NOTE: Different platforms may require different screws. Check with the mount manufacturer.

NOTE: In order to reduce the chances of movement, we recommend using a drop of blue loctite on each screw.

Step 2. Attach the mounted RISE on the rail base. Ensure that your mount is properly seated on the rail groove.

Step 3. Check to see if the RISE is positioned to accommodate appropriate eye relief.

Step 4. Tighten the mount's base screw using the provided T-10 Torx wrench.

4

Mounting on a Pistol

Prior to mounting the RISE, ensure that your pistol slide is cut or is compatible with the DeltaPoint pro footprint.

Step 1. Attach the RISE to your slide or adapter plate by using the provided screws and torx wrench.

Ensure that your RISE is properly seated on the slide cut.

NOTE: Different platforms may require different screws. Check with the mount manufacturer.

NOTE: In order to reduce the chances of movement, we recommend using a drop of blue loctite on each screw.

Sighting in

Once the RISE has been properly mounted, it is time to sight it in.

At the range, take a shot down range and adjust the elevation and windage (shown on the next page) until your point of aim coincides with your point of impact.

Repeat this process until you're satisfied with your zero.

5

Elevation and Windage Adjustments



Use a flathead key to make elevation adjustments to your red dot's position. As indicated, counter-clockwise moves your Point of Impact UP.
1 Click = 1 MOA



Use a flathead key to make windage adjustments to your red dot's position. As indicated, counter-clockwise moves your Point of Impact RIGHT.
1 Click = 1 MOA

6

Warranty

Warranty Disclaimer:

Every USO product is engineered to standards we developed over our 30-year history. If any USO product proves to be deficient in function, quality, workmanship, or material, U.S. Optics will repair or replace the product, regardless of transfer of ownership, for life.

Please contact us at 828.874.2242 or info@usoptics.com for an RMA prior to shipping in a product for repair.

U.S. Optics
100 Beiersdorf Drive
Connelly Springs, NC 28612

7