# RIVAL 4-32X56



USER MANUAL



# **WELCOME TO TEAM APEX!**

Thank you for purchasing this quality riflescope designed, tested and supported by a Canadian company.

If you need help with your new purchase or just want to drop us a line, we're always ready to listen.

# **TABLE OF CONTENTS**

THE APEX STORY / ABOUT YOUR NEW RIFLESCOPE	2, 3
FEATURES	4-5
TECHNICAL SPECIFICATIONS	6
CARE INSTRUCTIONS	7
RETICLE INFORMATION	8-9
ILLUMINATION CONTROLS	10
MOUNTING INSTRUCTIONS	11
SETTING UP AND ZEROING	12
ZERO-STOP AND TURN INDICATOR	13
COMPETITION THROW LEVER	14
PARALLAX ADJUSTMENT	15
TROUBLESHOOTING	16
WARRANTY & SUPPORT	17

# THE APEX STORY

Apex Optics is a Canadian sporting optics company based in Calgary, Alberta.

Our team is made up of competitive sport shooters and professionals who specialize in project management, STEM, manufacturing and CAD. We are also aided by several of the top competitive shooters in Canada when it comes to product design, prototyping, and most importantly testing.

"We started Apex in order to make the products that we'd want to use, at a price point that we thought was fair and within reach to everyone."

The founders of the company have been involved in competitive shooting sports for years and know what it takes to win. You need solid, top-quality products, and a company that will stand behind them and each and every one of its customers. We're glad that you found us, welcome to the team!

# **ABOUT YOUR NEW RIFLESCOPE**

Your new riflescope is a precision-machined and expertly assembled guidance system for your rifle.

It was specifically intended for long range shooting, whether recreational shooting or competitive sports like "PRS" or "NRL" styled timed action shooting disciplines.

Every part of the riflescope was designed to last a lifetime of normal use, from the stainless steel turret internals, the Type III anodized and hardened 34mm one-piece tube, to the premium Extremely Low Dispersion (ED) multi-coated glass, was specifically selected to give you the best chance possible at hitting the target downrange, each and every time.

Let's turn to the next page for a breakdown of all of the features on your new riflescope.

# **FEATURES**



# **FEATURES**

- 10 MRAD per turn Elevation Turret with Zero-Stop and Pop-Up 2-Turn Indicator
- Proprietary glass-etched Apex CLR™ (Competition Long Range) reticle
- 6 Levels of illumination (Red) on the Main Stadia With an "OFF" position between each setting
- The first-in-industry see-through integrated & removable throw lever
- 0.1 MIL windage and elevation adjustment per click
- Fast-Focus Eyepiece (+3/-2)
- Designed in Canada, Made in Japan

INCLUDED IN THE BOX: CUSTOM-MOLDED FLIP-UP COVERS, REMOVABLE THROW LEVER, SUNSHADE LENS CLOTH, SCOPE WRENCH, MANUAL

# **TECHNICAL SPECIFICATIONS**

Tube Diameter	34mm	Reticle Type	Glass Etched
Objective Lens	56mm	Elevation Adjustment	32 MIL
Magnification	4-32x	Windage Adjustment	20 MIL
FOV @ 100y	29.9ft-3.73ft	MILs/Rotation	10E / 10W
Eye Relief	3.54" (90mm)	Turret Rotation	CCM
Exit Pupil	8mm-1.6mm	Illumination Color	Red
Parallax Range	15 yards to Infinity	Illumination Levels	6 w/ On-Off
Glass Type	Extremely Low Dispersion (ED)	Length	15" (381mm)
<b>Light Transmission</b>	99.7%	Weight	37oz (1049g)
Focal Plane	First (FFP)	Mounting Length	7.4" (189mm)

# **CARE INSTRUCTIONS**

Disassembling or cleaning the scope internally will void the warranty. If the scope requires repairs, please refer to the Warranty section for comprehensive instructions on what to do next.

The external optical surfaces should occasionally be wiped clean. Use the lens cloth provided or an optical quality lens paper to wipe out dust or light dirt on the external lens surface. If large sand particles or heavy dirt contamination are present, remove them by blowing away or using a soft brush before proceeding further.

If you choose to use a liquid for cleaning the lenses, only use a product specifically formulated for use on optical lenses. Apply lens cleaning liquid as per manufacturer instructions and wipe off gently.

Always keep the included lens covers in place when the scope is not in use to avoid dust collecting on the surface of the lenses. Store the unit in a low-humidity environment.

# RETICLE INFORMATION


This riflescope is outfitted with our exclusive Apex Competition Long Range (CLR) reticle.

This custom-designed reticle features a .05 MIL floating dot center, and an open-top half of the reticle with 1 MIL negative elevation holdover marks.

We also included half-value elevation hold reference dots that you can use when engaging multiple targets without dialing for elevation.

1.5 MIL ranging marks on each side allow you to estimate the size of, or distance to, a target in situations where that information is not available.


Please see the next page for technical subtention values.

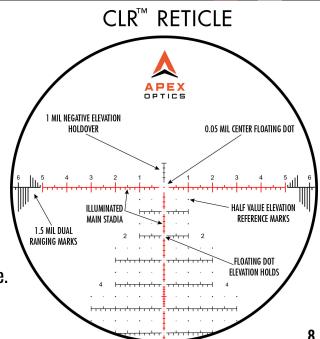

# **RETICLE INFORMATION**

A1	A2	А3	A4	A5	A6	A7
0.1	0.4	0.03	0.2	0.1	0.02	0.03
B1	B2	B3	B4	B5	В6	B7
0.03	0.04	0.03	0.2	0.02	0.1	0.1

The ranging reticles between the 5 & 6 MRAD positions (as marked by R) are sized from .1 to .5 MRAD on the top half, and from .6 to 1 MRAD on the bottom half. This provides a mechanism for estimating the size of, or the range to, a target quickly and easily.

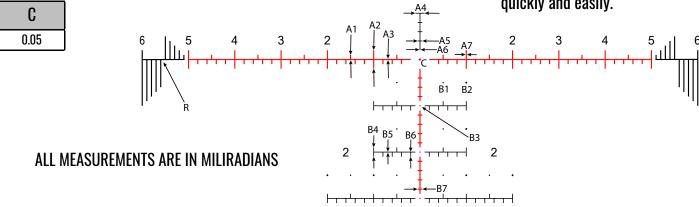


# **ILLUMINATION CONTROLS**

This riflescope features a variable intensity reticle illumination system to aid when shooting in low light situations.

The reticle brightness range can be adjusted from 1 through 6, with an OFF position, as indicated by a dot  $\bullet$ , between each ON position.


# REPLACING THE BATTERY

- 1. Unscrew the battery cover (CCW)
- 2. Remove the depleted battery
- 3. Replace with a new lithium CR2032 battery (positive side out)
- 4. Re-install the battery cap and be sure to fully close and tighten the cap

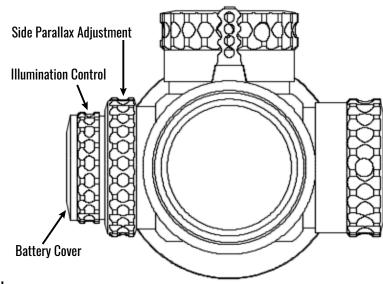

### MOUNTING INFORMATION

Always use high quality rings or one-piece mount that corresponds to the main tube diameter for the optic that you're trying to mount. In the case of this riflescope the tube diameter is 34mm so make sure that the mounting system matches this measurement.

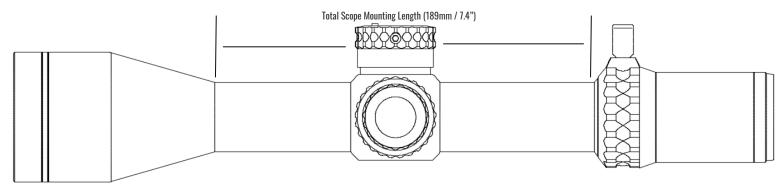

MOUNTING THE OPTIC TO A RIFLE

- 1. Mount the bottom ring halves (or mount) on the base of your rifle and tighten them to manufacturer's torque specification
- 2. Place the optic on the bottom ring halves and loosely install the upper ring halves so that it is is able to move freely between the rings
- 3. Use an optic levelling mechanism (i.e. scope bubble level system OR optic leveling wedges) to ensure that the riflescope is level with the base
- 3. Before tightening the scope ring screws, adjust for sight picture clarity and maximum eye relief so as to avoid injury from recoil
- 4. Tighten the top-half of the rings per the torque specs of the rings or mount. DO NOT EXCEED 25 IN/LBS

# SETTING UP AND ZEROING

# **FAST-FOCUS EYEPIECE**

The specially designed Apex Fast-Focus eyepiece is available to help you quickly and easily adjust the focus of the reticle, with a total adjustment range from +3 to -2.

# TO ADJUST THE RETICLE FOCUS:

- 1. Make sure that the rifle is safe and that the chamber is clear
- 2. Look through the scope on maximum magnification at a blank white wall or white paper
- 3. Turn the eyepiece in or out until the reticle image is as crisp as possible and that your eye is not straining to focus
- 4. Take your eye off the reticle for 30 seconds, and return to re-check the focus setting
- 5. Repeat as needed

# **ZEROING YOUR RIFLESCOPE (100M ZERO)**

ALWAYS MAKE SURE THAT IT IS SAFE TO DISCHARGE A FIREARM IN THE AREA THAT YOU WILL BE ZEROING!

- 1. Start the sight-in process at 25 meters.
  From a solid and supported rest fire a 3-shot group, ensuring that you aim at same spot each time
- 2. After the first 3-shot group, make adjustments to bring the bullet impact to center of target you're shooting at
- 3. Repeat this process at 100 meters and you will have an accurate 100 meter zero

HOT TIP: Use the same ammunition or handloaded rounds when zeroing that you will use in your rifle going forward. Your point of impact will change if you switch to different ammunition/load and you will have to re-zero.

# ZERO-STOP AND TURN INDICATOR

# **SETTING THE ZERO-STOP TURRET**

The elevation turret on your riflescope features an exceptional Zero-Stop system with a pop-up turn indicator.


### TO SET THE ZERO:

- 1. Make sure that the rifle is zeroed at desired distance (i.e. 100m)
- 2. Loosen the 3 set-screws (with included hex wrench) on the turret cap and gently lift the cap off in an upward motion
- 3. Carefully put the turret cap back on with the ZERO line aligned with the triangle shaped reference mark on the body
- 4. Check that the ZeroStop mechanism (V-shaped stopper on the underside of the elevation turret) is facing open-side clockwise
- 5. While holding the turret cap hand-tighten the 3 screws to lock it in place while ensuring that you do not move the turret while tightening the cap back into place

# POP-UP TURN INDICATOR

Your riflescope's elevation turret features a stainless-steel pop-up turn indicator that lets you know when you're on the second turn (or revolution) when dialing for distance.

When in the "down" position it will be flush with the turret cap indicating that you're still on the first revolution (i.e. big numbers). When in the "UP" position, as shown below, it means you're on the second revolution and should use the small numbers for reference.

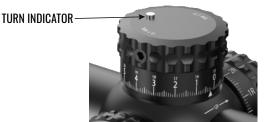


# **COMPETITION THROW LEVER**

The competition throw lever included with your riflescope was specially designed to be help with dialing to the desired zoom setting quickly during competitive shooting scenarios. It also features see through rings so as to not block your view downrange.

### TO INSTALL THE THROW LEVER:

1. Remove the aluminum plug from the zoom ring body, as shown in FIGURE 1, by removing the two set screws with the provided scope wrench (hex key), then lift out plug and place back in the product box or store securely elsewhere.

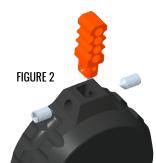



2. Replace the plug with the competition throw lever and re-install the two set screws (FIGURE 2). Hand tighten only; make sure not to overtighten.

REVERSE THE PROCESS TO REMOVE THE THROW LEVER AND RE-INSTALL THE PLUG

# **PARALLAX ADJUSTMENT**

# WHAT IS PARALLAX?

Parallax describes a situation where the focal plane of the object being viewed slightly is offset from the reticle. If you have parallax, you have an optical illusion that must be corrected, otherwise your point of aim may be not be aligned with the intended point of impact.

# Parallax should not be confused with focus.

Parallax compensation changes neither the focus of the reticle, nor the focus of the image. When you adjust the parallax knob it moves the planes at which these two objects are in focus so that they share the same plane.

# PRE-SET DISTANCE INDICATORS

Every Apex riflescope comes with a wide range of adjustment for the parallax effect.

The distance gradient does not include any physical numbers, but rather interval marks that denote starting points for parallax adjustment.

Please see the chart to the right for your reference.

 $\infty$ 

800 yard

500 yard

200 yard

100 yard

# TROUBLESHOOTING

- Problems thought to be associated with the scope are usually associated with mounting rather than the scope itself
- Take time to ensure the rings/mounts are tight to the rifle and that scope is secured and does not twist or move in the rings
- Ensure that the rifle's action screws are securely tightened and properly torqued against the chassis or stock
- Confirm that the correct base and size of rings are being used, are installed properly, and that the scope is level with action
- Be sure to torque rings and mounts per manufacturer's specifications
- If you are experiencing bad groupings be aware that there are many factors that can lead to that result
- Always utilize a solid rest and maintain good shooting technique and fundamentals
- Have a qualified gunsmith look over your rifle to be sure all components are in working order
- Ensure that the action and barrel are properly cleaned
- Some rifles and ammunition or handload combinations do not work well together; try different ammunition or load combination

# **WARRANTY & SUPPORT**



Every Apex Optics product is backed by a lifetime\* warranty. That is our oath to you! When things go unexpectedly or the product doesn't work as it should, you can have peace of mind knowing that our products carry a lifetime transferable warranty. Apex guarantees to repair or replace your product if damaged through normal use. No charge to you, no receipt or registration is required.

\* This warranty does not cover damages caused by deliberate damage or misuse, fire, flooding, theft, or maintenance provided by someone other than Apex Optics.

### **CUSTOMER SUPPORT**

If you need help with something or just want to tell us how much you love our products, we're always here to listen! Call or email us for product support, or reach out to us on our social channels.

**TOLL FREE:** 1-877-899-APEX (2739)

EMAIL: INFO@APEXOPTICS.CO
WEB: HTTPS://APEXOPTICS.CO



apex\_optics



apex\_optics



apexsportoptics

# NOTES



TOLL FREE: 1-877-899-APEX (2739) EMAIL: INFO@APEXOPTICS.CO WEB: HTTPS://APEXOPTICS.CO