



PRODUCT MANUAL

TRIUMPH™ HD 850

LASER RANGEFINDER

SPECIFICATIONS

MAGNIFICATION	5x
OBJECTIVE LENS	21mm
MAX REFLECTIVE RANGE	Up to 850 yds. (777m)
TREE RANGE	Up to 500 yds. (457m)
DEER RANGE	Up to 350 yds. (320m)
MINIMUM RANGE	6 yds. (5.5m)
ACCURACY	± .5 yd. @ ≤ 100 yds.
	± 2 yds. @ ≥ 100 yds. & ≤ 850 yds.
MAXIMUM ANGLE READING	± 89°
FIELD OF VIEW	Linear @ 1000 yds. 335'
	Angular 6.4°
EYE RELIEF	13mm
BATTERY TYPE	CR2
BATTERY LIFE	4000 + Range Cycles
LENGTH	3.8" (96.5mm)
HEIGHT	3.1" (78.7mm)
WIDTH	1.4" (35.6mm)
WEIGHT W/ BATTERY	4.6 oz. (130.4g)

TRIUMPH™ HD 850
LASER RANGEFINDER

Ranging made simple for the way you hunt. The Triumph™ HD 850 Laser Rangefinder delivers fast, accurate readings for hair-splitting shots that lead to short blood trails. With intuitive range and target modes preferred by rifle and bowhunters, it's ready for planning a stalk or taking the shot in thick woods or open terrain. Compact and lightweight, it's made for deer hunters who need gear they can trust to deliver season after season.



Images are for representation only.
Product may vary slightly from what is shown.

BASIC OPERATION

Battery Installation and Replacement

To insert a new battery, flip up the finger tab on the Battery Cap located on the bottom of the unit and unscrew, counterclockwise, to remove. Insert CR2 battery with the positive side (+) facing outwards. Reinstall Battery Cap and ensure it is tightly closed.




Power Up

Once the battery is installed, the Triumph™ HD 850 is in ready condition – the normal, power-off condition when not ranging. To power up the Triumph™ HD from ready condition, press and release the “Measure” button. The HCD or LOS ranging screen will display. The Triumph™ HD 850 will power down automatically after 15 seconds of non-use.



Low Battery Icon

The Low Battery Icon comes on at 25% and stays on until there is no power or the battery is replaced.

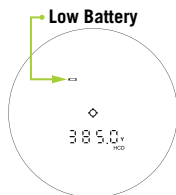

Focus

Adjust the Diopter until the image is sharp. Make note of this Diopter setting in case you need to set it again.



Attaching the Lanyard

The Lanyard provides a secure way to carry your rangefinder.



Loop the Lanyard through attachment socket.

MODE SELECTION

Changing Modes on the Triumph™ HD 850


The Triumph™ HD 850 is factory set to the angle compensating HCD Range Mode, Normal Target Mode, Auto-Shutoff at 15 seconds, and displayed in Yards.

To Change Modes

Press and release the “Measure” button to power on the unit. To change modes, press and hold the “Menu” button until the Mode Selection screen appears (about three seconds).

Scroll through the mode options by clicking the “Menu” button. To adjust a mode, click the “Measure” button.


To save your settings and exit the Mode Selection screen, press and hold the “Menu” button for at least three seconds.

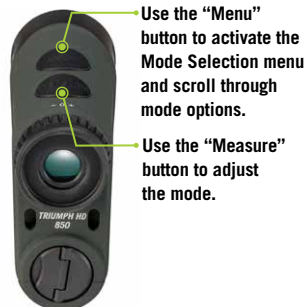


RANGING MODE SELECTION

Choose Between the HCD and LOS Modes

After activating the Mode/Display Selection, press the “Measure” button to toggle between the HCD and LOS displays. Press the “Menu” button to save your desired choice and continue through to the Range Unit Selection screen.

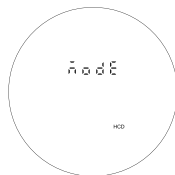

HCD Mode

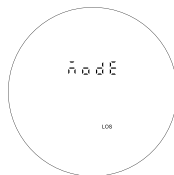


LOS Mode

HCD Mode

The Horizontal Component Distance (HCD) range display is intended to be your primary mode, used for most rifle and archery shooting applications. The yardage number displayed is the critical horizontal component distance.

The displayed HCD yardage number is corrected for shot angle and needs no extra user input; shooters simply use the appropriate level ground bullet drop for the range displayed. Archers use the appropriate level ground sight pin for the range displayed.

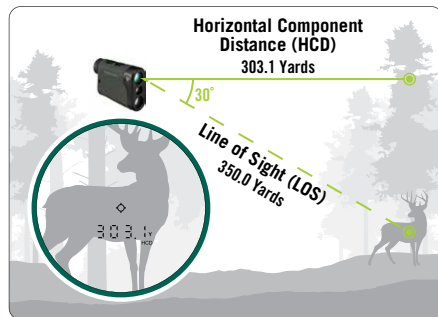

Using the HCD Mode

Use the HCD Range Mode in the following situations:

- Rifle shooting on level ground at any range.
- Rifle shooting out to ranges of 800 yards with mild slopes (less than 15 degrees).
- Rifle shooting out to ranges of 400 yards with moderate slopes (15 to 30 degrees).
- For all archery shooting.

Note: To correctly account for wind, you need to know the Line of Sight distance to the target as it is based on how far the bullet travels to the target. This can be achieved using the LOS Mode.

LOS Mode

The LOS (Line of Sight) mode is intended for rifle shooters who are using slope correcting ballistic drop data cards, ballistic cell phone applications, or other devices with ballistic programs and who are shooting at distances beyond 500 yards with slopes greater than 15 degrees.

The range number displayed in LOS Mode is the actual line of sight range with no ballistic correction for slope. Most of the commonly used ballistic devices can provide independent slope correction for bullet drop data and


require actual line of sight range input. Using the LOS range when calculating bullet wind drifts under these steep slope/long range conditions will provide a higher degree of accuracy than using the HCD range.

To use, simply input the LOS range number into the electronic device or use the LOS range when referencing ballistic drop cards with slope correction.

LOS Mode - Incline

When in LOS mode, an additional number is displayed above the range number. This number is slope incline shown in degrees.


The slope incline number can be entered into ballistic programs or field cards to help calculate precise bullet drops in mountainous terrain.

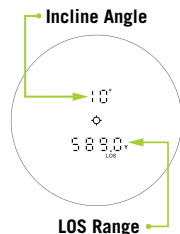


Range Unit Selection

Choose Between Yards and Meters

Press the “Measure” button to toggle between the Yards and Meters display. Press the “Menu” button to save your desired choice and move to the Auto-Shutoff Selection screen.

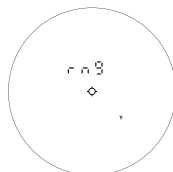


Yards

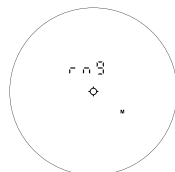

Meters

Auto-Shutoff

The Triumph™ HD 850 offers three Auto-Shutoff program options: 15 seconds, 30 seconds, and 60 seconds. Press the “Measure” button to select the Auto-Shutoff time. This will be the last Mode Selection. Press the “Menu” button to save your desired choice and return to Range Mode Selection or press and hold the “Menu” button for three seconds to save and exit Mode Selections.

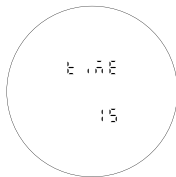

TARGET MODE SELECTION

The Triumph™ HD 850 provides three target modes: Normal Mode, First Mode, and Last Mode.

Normal Mode

Your Triumph™ HD 850 comes preset to Normal Mode. This is the standard mode providing the targets range with the strongest range result. Normal Mode is the recommended target mode for most situations.

First Mode

This mode displays the closest distance when ranging. This mode is ideal for ranging a smaller target in front of other larger or more reflective objects.

Note: If unsure about the range, simply range again.



Range captured on closer deer.

Last Mode

This mode displays the farthest distance when ranging. This mode is ideal for ranging a specific target behind a group of objects like brush, trees, rocks, etc.

Note: If unsure about the range, simply range again.




Range captured on farther deer.

SETTING AND USING TARGET MODES


While in ready condition, cycle between target modes by pressing and releasing the “Menu” button. Once a target mode is selected, press the “Measure” button to activate the target mode.

When Normal Mode is selected, “NRML” will be displayed in the upper segment of the display. Once “Measure” is pressed, “NRML” will disappear from the display, but the unit remains in Normal Mode. If powered down in Normal Mode, “NRML” will be displayed each time the unit powers back on.


For First and Last Mode, “First” and “Last” will always be displayed, signaling that you are in the respective target mode. The range measurement will display as the Measure button is pressed and released.

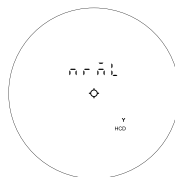

Normal Mode

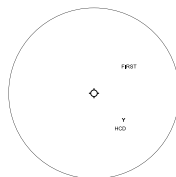

First Mode

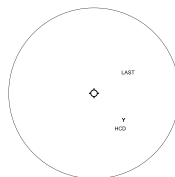


Last Mode

RANGING

Ranging in Normal Mode


With the Triumph™ HD 850 powered up, position the reticle on the target object you wish to range, then press and release the “Measure” button to get the distance measurement. If the laser is not able to range due to the reflectivity of the target object, or being too close, you will see a display similar to that shown here. To range a new target, simply re-aim and press the “Measure” button again.

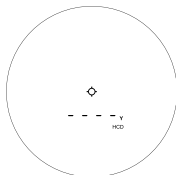


No Range Returned

Scan Feature

Activate the Scan Feature by pressing and holding the “Measure” button. Keeping the button depressed will continuously measure as you pan back and forth across the target objects. “Scan” will flash in the upper right-hand corner of the display while scanning.

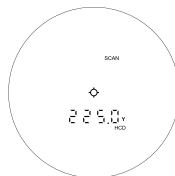


HCD Scan

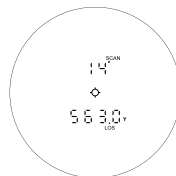

LOS Scan

Scanning to get range:

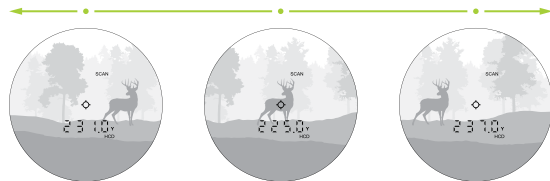

Scan back and forth, watching for yardage number to display or change.

Range-finding Tips

Laser range-finders work by emitting a brief pulse of light aimed at a target object. Distance is determined by the amount of time taken for the light to emit and return to the laser's internal receiver. A laser's ability to read range can be affected by many things, mostly relating to the target object.

- Light colors will usually reflect better than dark ones.
- Snow, rain, and fog will have adverse effects on ranging ability.
- Dull or textured surfaces will not reflect as well as a hard, shiny surface.
- Ranging under cloud cover can improve laser performance compared to bright, sunny conditions.
- Solid objects, such as rocks, will reflect better than bushes.
- Flat surfaces perpendicular to the laser will reflect better than curved surfaces or surfaces angled in relation to the laser.
- Ranging over water can sometimes cause false reflections and readings.
- At longer distances, larger objects will be easier to range than smaller objects.
- If you are having difficulty ranging an animal or object, try ranging a different nearby object, or use the Scan Feature to pan back and forth while watching for changes in range.

MAINTENANCE

Cleaning

Your Triumph™ HD 850 requires very little routine maintenance other than periodically cleaning the exterior lenses. The exterior may be cleaned by wiping with a soft cloth. When cleaning the lenses, be sure to use products that are specifically designed for use on coated optical lenses.

- Be sure to blow away any dust or grit on the lenses prior to wiping the surfaces.
- Using your breath, or a small amount of water or pure alcohol, can help remove stubborn dried water spots.

Lubrication

All components of the Triumph™ HD 850 permanently lubricated, so no additional lubricant should be applied.

Note: Other than to remove the Battery Cap, do not attempt to disassemble any components of the rangefinder. Disassembling of rangefinder may void warranty.

Storage

If possible, avoid storing your rangefinder in direct sunlight or any very hot location for long periods of time.

FCC REQUIREMENTS

The user's manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SAFETY AND PRECAUTIONS

Do not stare into beam or view directly without laser eye protection. Staring continuously into beam for prolonged periods of time could cause harm to your eyes.

- Use the correct battery (CR2) and proper battery orientation.
- Do not look at sun.
- Do not activate “Menu” or “Measure” buttons while aiming at eye or looking into objective lens.
- Do not disassemble.
- Do not allow children to play with unit.
- Consumer laser product EN 50689:2021

CLASS 1 LASER PRODUCT INVISIBLE LASER RADIATION
CLASS 1 CONSUMER LASER PRODUCT EN:50689:2021

THIS PRODUCT COMPLIES WITH IEC 60825-1:2014-05 Ed.3.0 AND COMPLIES WITH 21CFR SUBCHAPTER J PARTS 1040.10 AND 1040.11 EXCEPT FOR DEVIATIONS PURSUANT TO LASER NOTICE NO.56, DATED MAY 8,2019.

Sheltered Wings, INC. One Vortex Drive, Barneveld, WI 53507 February 2025



Caution—Use of controls, adjustments, or performance of procedures other than those specified herein may result in hazardous laser radiation exposure.



NOTICE

Virtual Patent Marking Notice by Vortex Optics

This product may be protected by patents in the U.S. and elsewhere for Vortex Optics. **vtx.legal** website is provided to satisfy the virtual patent marking provisions of various jurisdictions including the virtual patent marking provisions of the America Invents Act and provide notice under 35 U.S.C. §287(a). Please visit **vtx.legal** to view list of products that may be covered by one or more U.S./ Foreign patents or published patent applications.



VIP® WARRANTY OUR UNCONDITIONAL PROMISE TO YOU.

We promise to repair or replace the product. Absolutely free.

- ▶ **Unlimited.**
- ▶ **Unconditional.**
- ▶ **Lifetime Warranty.**

You do not have to register, save the box, or a receipt for the Warranty to be honored.

Learn more at VortexOptics.com

service@VortexOptics.com • 1-800-4VORTEX

Note: The VIP® Warranty does not cover loss, theft, deliberate damage, or cosmetic damage not affecting product performance.

For the most up to date manual visit **VortexOptics.com**



M-00428-0

© 2025 Vortex Optics

® Registered Trademark and TM Trademark are property of their respective owners.